

ZSERIES
ACCESSORIES

since 1988
AUDIO
SYSTEM
german sound

HLC2 EVO2

2-CHANNEL HIGH/LOW CONVERTER



WWW.AUDIO-SYSTEM.DE





BEDIENUNGSANLEITUNG / MANUAL HLC2 EVO2

since 1988
AUDIO
SYSTEM
german sound

Klemmen Sie zu allererst die Stromversorgung (Batterie) des Fahrzeugs ab. Verbinden Sie die Lautsprecher-
ausgänge des Steuergeräts (Radio) mit den entsprechenden Eingängen [INPUT] am **HLC2 EVO2**. Auf richtig
Polung achten...! Verbinden Sie die **HLC2 EVO2** Ausgänge [OUTPUT] via Cinchkabel mit den
entsprechenden Eingängen einer Endstufe oder eines Soundprozessors (**Anschlussbild 1**). Wenn Ihr Steuergerät
über einen **Remoteausgang** verfügt, schließen Sie die Endstufe direkt an diesen an. Falls dies nicht der Fall ist,
verfügt der **HLC2 EVO2** über eine Remote-Steuerung (**Anschlussbild 2**). Verbinden Sie zunächst den
Pluspol [B+]. Nehmen Sie die 12 V Spannung unbedingt hinter einer Sicherung ab. Danach verbinden Sie den
Minuspole [GND] mit der Masse. Der **REMOTE OUT** des **HLC2 EVO2** wird mit dem Remote der Endstufe
verbunden. Das HLC2 schaltet nur die Endstufe ein, wenn an dem Lautsprechereingang ein Signal anliegt.

!.. ACHTUNG ..! Bevor Sie die Stromversorgung wieder anschließen, vergewissern Sie sich, dass alle Kabel
dem Schaltbild entsprechend angeschlossen und ordnungsgemäß verlegt sind. Sorgen Sie für eine professionelle
Befestigung des **HLC2 EVO2**.

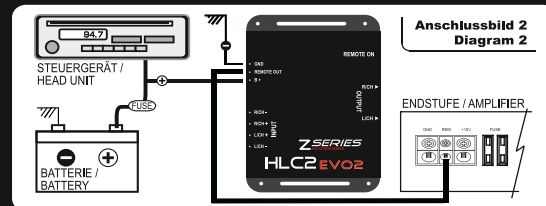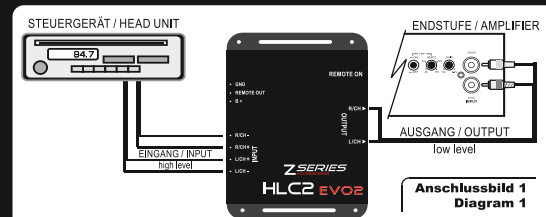

First disconnect the power supply (battery) of the vehicle. Connect the speaker output from the head unit (radio) to
the „High Level“ INPUT of the **HLC2 EVO2**. Pay attention for the right way of connection. Afterwards
transfer the **HLC2 EVO2** OUTPUT through cinch cables (RCA) to RCA-input of the amplifier or to the sound
processor (**diagramm 1**). If the head unit provides a remote-output than please connect the amplifier directly to
the remote-terminal. Otherwise the **HLC2 EVO2** provides a remote control (**diagramm 2**). First bond the
positiv terminal [B+]. Important: Connect the + 12 voltage after a fuse. Afterwards, connect the negativ terminal
[GND] with the ground of the car chassis. The **REMOTE OUT** of the **HLC2 EVO2** has to be connected to the
remote-terminal of the amplifier. The **HLC2 EVO2** only turns on the amp if a loudspeaker is installed.

!.. CAUTION ..! Before reconnecting the power supply (battery) make sure that all cables are connected and
laid correctly accordingly to the circuit diagram. Take care of a professional attachment for the **HLC2**
EVO2.

WWW.AUDIO-SYSTEM.DE

